

Release note on this firmware version -

(Note: Image Moments with S/N 11103001 or above will already have this firmware installed)

1. When Auto-Start is set to ON, Image Moments will start-up in Photo Slideshow mode.

- a. If you have the RANDOM PLAY feature (from PHOTO SETUP) set to OFF (default setting), the Photo Slideshow will display all the photos on the memory card in alphabetical order.
- b. If you have the RANDOM PLAY feature set to ON, the Photo Slideshow will display all the photos on the memory card in random order.
- c. To play the Music Slideshow, press the SLIDESHOW button with the music note on the remote control.

2. The Repeat function for playing photos from a selected folder in the FILE LIBRARY mode has been corrected.

- a. When you access FILE LIBRARY and play the photos of a selected folder with REPEAT set to ON, the folder will repeat after the last file.
- b. If REPEAT is set to OFF, the device will pause after the last file.
- c. It is possible to play a Music Slideshow for a specific folder if that folder contains both the photos and MP3 file(s) that you want to play. Please note that the Music Slideshow within a folder will not repeat.

3. The Repeat function is limited to 512 files.

- a. If you would like to keep more than 512 photos on your memory card, you can organize them into different folders (with up to 512 photos per folder). Then you can select a folder to playback and set REPEAT to ON and Image Moments will continuously play the photos in the selected folder in a loop.
- b. This limit also applies to the playing photos from the Photo Slideshow mode (the mode that is activated from Auto-Start when you turn on Image Moments). So if the number of the photos on your card total more than 512 (even if they are stored in different folders), the Photo Slideshow will not be able to repeat. If this is a problem for you, you can turn the RANDOM PLAY feature to ON. Then, when you play a Photo Slideshow of all the photos on your memory card, they will continuously play in random order.

Instructions on Updating Firmware on Image Moments -

1. Copy the firmware file 'swk666.rom' onto a Compact Flash (CF)* memory card. Make sure that there are no other files on the CF card.
2. Turn off Image Moments and remove all memory cards from the device.
3. Turn on Image Moments and wait till you see the screen with the "No Media Detected" message.
4. Insert the CF card into your Image Moments.
The device will automatically update the firmware. Wait until you see 'Done' displayed on the final line to indicate that the process is complete.

*DO NOT interrupt the firmware update while it is in process. Stopping the firmware update before it is completed may damage your device and make it inoperable.

5. Turn off your Image Moments and remove the memory card.
6. Resume normal usage of your Image Moments.

*** Note that the firmware installation can only be done with a CF card. Using any other type of memory card will damage your Image Moments.**