

# DIGITAL FOCI

## *Image Moments*

DIGITAL PICTURE DISPLAY

### User's Guide





**Note**

Digital Foci, Inc. reserves the right to make improvements and/or changes to the products and programs described in this User's Guide at any time without notice. Please read the entire User's Guide before operating the device.

Digital Foci, Inc. assumes no responsibility for errors or omissions in this User's Guide. Nor does Digital Foci, Inc. make any commitment to update the information contained herein.

**Trademarks**

Image Moments and Digital Foci are trademarks of Digital Foci, Inc.

All names and products mentioned within this document are registered trademarks of their respective companies.

©2005 Digital Foci, Inc. All rights reserved. This publication is intended for sole use by the owner of the associated device. Neither this publication nor any part of this publication may be printed and distributed, electronically distributed, reproduced, translated, or reduced to any other electronic medium or machine readable form without the prior written permission of Digital Foci, Inc.

Digital Foci, Inc., 3111 Via Mondo, Rancho Dominguez, CA 90221 USA

## **Limited Warranty**

As the original purchaser of this product, you receive these warranties from Digital Foci, Inc.

Your Image Moments (hereafter referred to as “Device”) will be free from defects in material and workmanship and will perform in substantial compliance with your user documentation accompanying the Device for 1 year from the purchase date providing proper use of the Device.

Your warranty rights will be honored so long as you read and follow your user documentation for all aspects of operating the Device. Any unauthorized or improper use of the Device may cause your warranty to become void.

If there is a problem or defect with your Device, please contact Digital Foci, Inc.

## **Disclaimer**

This limited warranty is the only warranty Digital Foci, Inc. makes for the Device. To the extent allowed by Law, no other warranty applies, whether expressed, implied, or statutory, including any warranty of merchantability, of fitness for a particular purpose, or of non-infringement. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Digital Foci, Inc. liable for loss of or damage to, a computer; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Digital Foci, Inc. has been informed of their possibility.

## **Additional Rights**

Some states or countries do not allow exclusion or limitation of incidental or consequential damages, or limitations on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or country to country.

## Caring for Image Moments

To keep Image Moments in good condition and working properly, follow these basic guidelines:

- Do not drop, jar, bump, shock or expose Image Moments to severe vibration.
- Do not operate or store Image Moments in dusty environments.
- Do not leave Image Moments under direct sunlight, in a parked car, or in other situations where the temperature may be above 140°F (60°C).
- To prevent risk of heat buildup, place Image Moments in a well ventilated location.
- To prevent risk of short circuit and damage, do not expose Image Moments to liquids, precipitation, or moisture.
- To avoid bodily injury or damage to internal components, do not take apart Image Moments.
- Never force insertion of the memory card if it does not insert smoothly. Instead, examine to see if the memory card orientation and slot is correct.
- Do not leave Image Moments running unattended.
- Use only power adapters and cords provided by the manufacturer.



**Warning:** As with any electrical device, Image Moments will become warm after prolonged periods of use. If you notice that Image Moments becomes excessively hot, power-off Image Moments and allow it to cool down before resuming use.

## Table of Contents

<b>1. Welcome!</b> .....	<b>1</b>
<b>1.1. Supported Memory Card Formats</b> .....	<b>1</b>
<b>1.2. Supported File Formats</b> .....	<b>1</b>
<b>1.3. Package Contents</b> .....	<b>2</b>
<b>2. Getting Started</b> .....	<b>3</b>
<b>2.1. Device Layout</b> .....	<b>3</b>
<b>2.2. Getting Image Moments Ready for Use</b> .....	<b>4</b>
<b>2.3. Remote Control Explanation</b> .....	<b>5</b>
<b>2.4. Inserting Memory Cards</b> .....	<b>7</b>
<b>2.5. Selecting from Multiple Memory Cards</b> .....	<b>8</b>
<b>2.6. Adjusting the Video Settings</b> .....	<b>9</b>
<b>2.7. Setting the Volume</b> .....	<b>10</b>
<b>3. Basic Operation Modes</b> .....	<b>11</b>
<b>3.1. Photo Mode</b> .....	<b>13</b>
<b>3.2. Music Mode</b> .....	<b>15</b>
<b>3.3. Video Mode</b> .....	<b>17</b>
<b>3.4. File Mode</b> .....	<b>19</b>
<b>3.5. Music Slideshow Mode</b> .....	<b>20</b>
<b>4. How do I</b> .....	<b>21</b>
<b>4.1. Play all the contents of my memory card</b> .....	<b>21</b>
<b>4.2. Play a slideshow of all the photos only.</b> .....	<b>21</b>
<b>4.3. Play a music slideshow of all the photos on my memory card</b> .....	<b>21</b>
<b>4.4. Play only the files from a specific folder</b> .....	<b>22</b>
<b>4.5. Zoom and pan the displayed photo.</b> .....	<b>22</b>
<b>4.6. Change the remote control battery</b> .....	<b>23</b>
<b>5. System Setup Options</b> .....	<b>24</b>
<b>5.1. Photo Setup</b> .....	<b>25</b>

*Image Moments*

User's Guide

---

5.2.	Music Setup .....	25
5.3.	Video Setup.....	26
5.4.	Slideshow Setup.....	27
5.5.	Preferences.....	28
6.	<i>Tips and Techniques</i> .....	29
6.1.	Organize your files to play in a specified order.....	29
6.2.	Organize your photos by folders/events.....	30
6.3.	Keep a dedicated memory card for Image Moments.....	30
7.	<i>Frequently Asked Questions</i> .....	31
8.	<i>Troubleshooting and Technical Support</i> .....	34
9.	<i>Appendix – Image Moments Technical Specifications</i> .....	35
10.	<i>Regulatory Compliance</i> .....	36
10.1.	FCC Part 15 Compliance .....	36
10.2.	CANADIAN DOC STATEMENT .....	37
10.3.	CE Standards.....	37
10.4.	UL/CSA.....	37

## 1. Welcome!

Congratulations on purchasing Image Moments – Digital Picture Display.

Image Moments is:

- A **digital picture display** that gives you a quick and easy way to view your digital camera pictures directly from the memory card.
- A **source of memories and happiness** that can help you relive your treasured memories every day.
- A **stylish and classy decorative piece** that will look great in any living room or office setting.
- A **mini entertainment center** that can playback your photos, videos, and music.

### 1.1. Supported Memory Card Formats

Image Moments has been tested to support the following memory card formats:

- CompactFlash<sup>®</sup> (CF<sup>™</sup>) Type I & II, MicroDrive<sup>™</sup>
- SD Card (SD<sup>™</sup>) / miniSD<sup>\*</sup>
- Memory Stick<sup>™</sup>, MS PRO, MS Duo<sup>\*</sup>, MS PRO Duo<sup>\*</sup>
- MultiMedia Card<sup>™</sup> (MMC) / RS-MMC<sup>\*</sup>
- SmartMedia<sup>™</sup> (SM)
- xD Picture Card<sup>\*</sup>

\* Adapter required.

### 1.2. Supported File Formats

Image Moments supports the following file formats:

- Image format: JPEG
- Video formats: MPEG-1, MPEG-2, MJPEG / (.mpg, .dat, .avi)
- Audio format: MP3

 
### **1.3. Package Contents**

Before using your Image Moments, check that your package contains the following items:

- Image Moments
- Remote control
- AC power adapter
- Video/Audio cables
- Detachable leg
- User's Guide
- Quick Start Guide
- Warranty Card

## 2. Getting Started

### 2.1. Device Layout

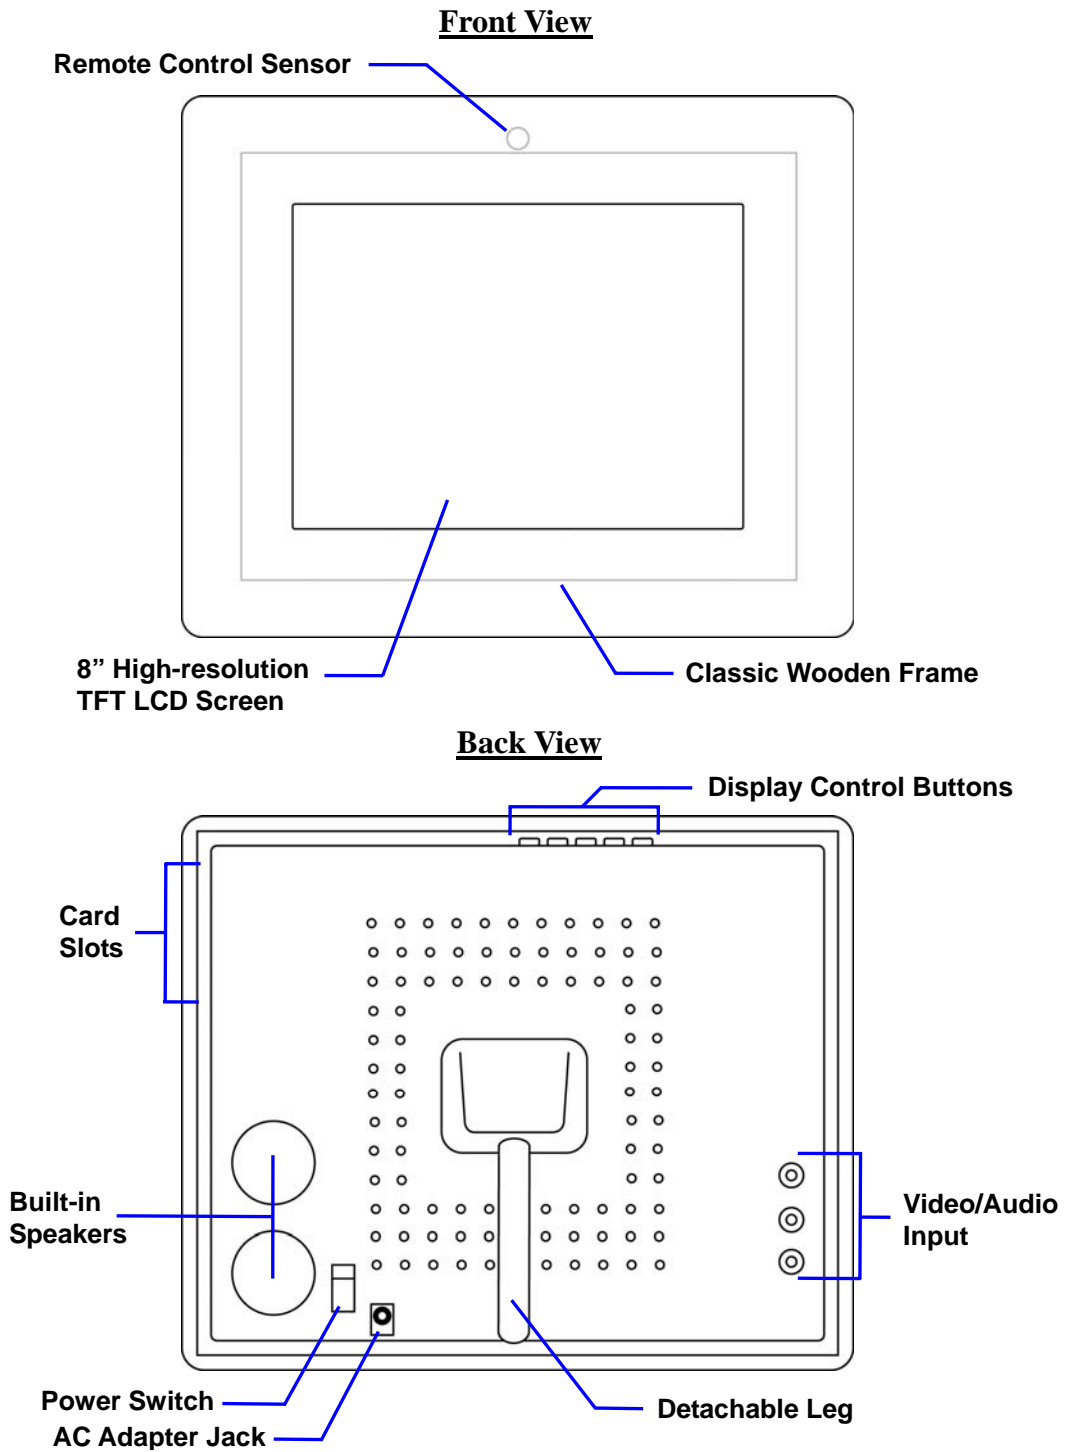

## **2.2. Getting Image Moments Ready for Use**

### **2.2.1. Attaching the leg**

Locate the detachable leg from the packaging and screw it into the detachable leg port on the back side of Image Moments just under the middle part that slightly sticks out.

### **2.2.2. Powering Image Moments**

After the detachable leg is securely attached to Image Moments, plug the AC adapter to the AC Adapter Jack on the back of Image Moments.

Next, connect the power plug of the AC adapter to a wall socket.

Now you can power on Image Moments by flipping the Power Switch to the up position.

### **2.2.3. Preparing the remote control**

 
The remote control is packaged with a protective tab between the battery and battery terminal.

Activate the battery by pulling on the tab that separates the battery from the battery terminal. After this tab is removed, the remote control is ready for use.

### 2.3. Remote Control Explanation

The buttons on the remote control have been designed for optimal ease of use.

Similar functions are grouped together to provide simple and intuitive operation.

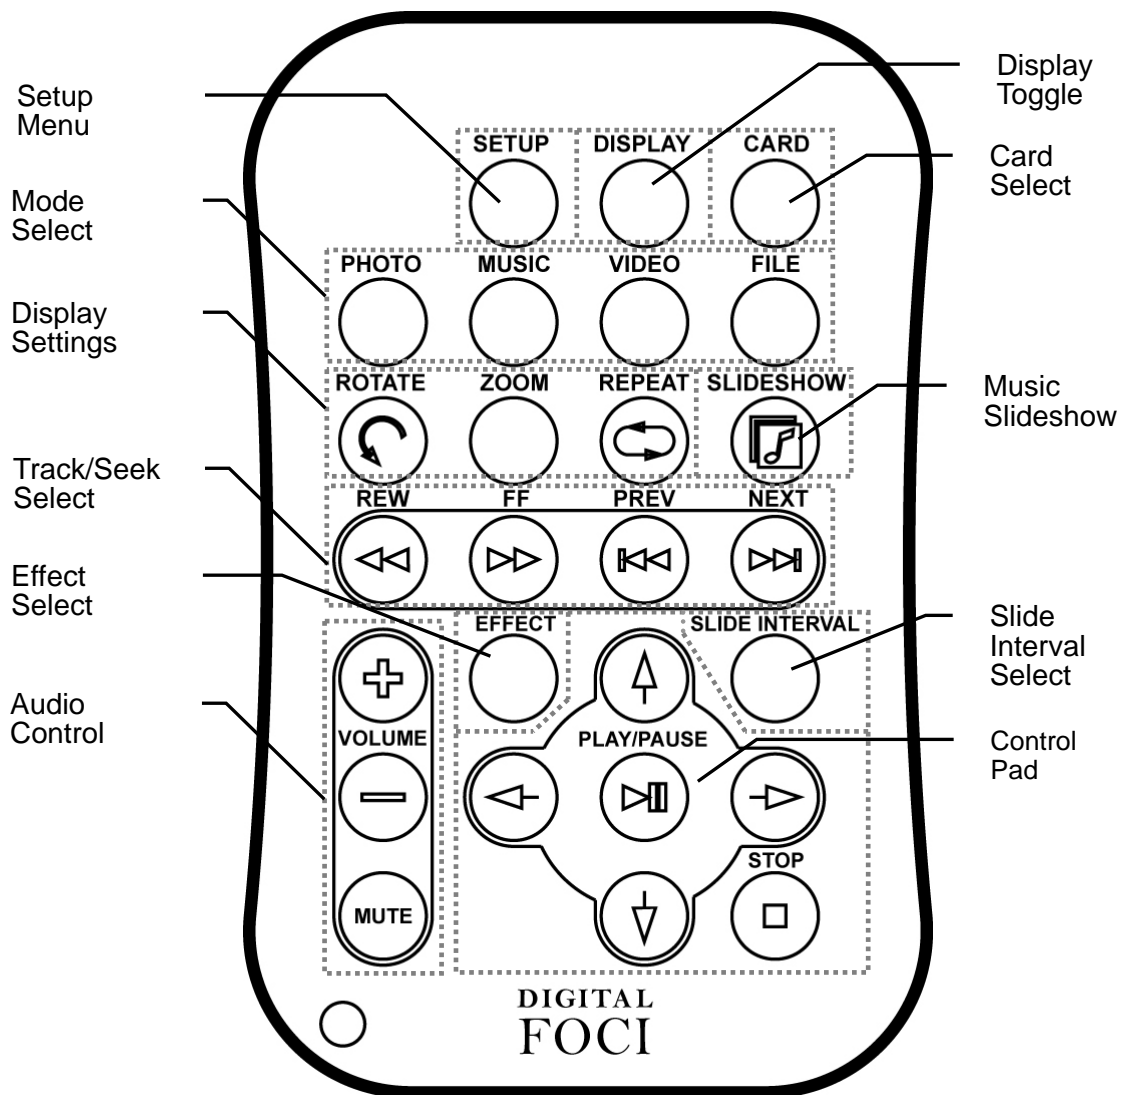

## Image Moments

### User's Guide

---

 
Grouping Name	Function
Setup Menu	Access Image Moments Setup Menu.
Display Toggle	Turn on and off file information display.
Card Select	Select memory card to access when more than one card is inserted into Image Moments.
Mode Select	Select operation mode. <ul style="list-style-type: none"><li>▪ Photo Mode – select photo files only.</li><li>▪ Music Mode – select music files only.</li><li>▪ Video Mode – select video files only.</li><li>▪ File Mode – open File Library Navigation.</li></ul>
Display Settings	Rotate photo, zoom photo, and change the repeat setting on-the-fly.
Music Slideshow	Start Music Slideshow Mode. <i>Note: This function can only be activated from Photo, Music, or File modes.</i> <ul style="list-style-type: none"><li>▪ <u>Photo or Music Mode:</u> All photos and music on the memory card are included.</li><li>▪ <u>File Mode:</u> Only photos and music in current folder are included.</li></ul>
Track/Seek Select	Fast-forward, rewind or change track number being played.
Audio Control	Adjust the volume and mute toggle.
Effect Select	Change the effect of the files being played. <ul style="list-style-type: none"><li>▪ <u>Photo Mode:</u> Change the photo slideshow transition effect.</li><li>▪ <u>Music Mode:</u> Change the equalizer effect.</li></ul>
Slide Interval Select	Change the slide interval timing of the photo slideshow.
Control Pad	Control the main function of Image Moments. <ul style="list-style-type: none"><li>▪ <u>Directional buttons:</u> Move cursor up, down, left, and right.</li><li>▪ <u>Play/Pause button:</u> Play/pause or select highlighted file.</li><li>▪ <u>Stop:</u> Stop playing selected file or return to the previous navigation level.</li></ul>

## 2.4. Inserting Memory Cards

Insert your memory cards in the designated memory card slot with the label side facing the front as demonstrated in the following drawing.




**Warning:** Do not force the memory card in the slot if it does not slide in smoothly. Instead, remove the card, check the card orientation and slot, and try again.

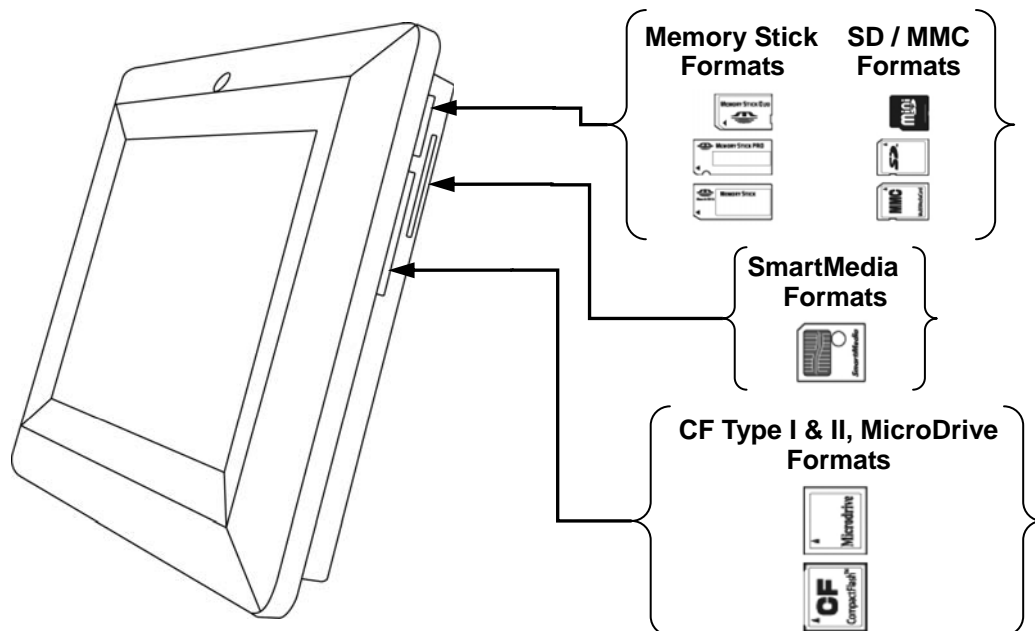

## 2.5. Selecting from Multiple Memory Cards

When more than one memory card is inserted in Image Moments, you can choose which card to access by navigating to the Mode Select screen (See *Section 3* for details about the Mode Select screen.) and pressing the CARD button on the remote control.

 When the CARD button is pressed, the following screen will be displayed:

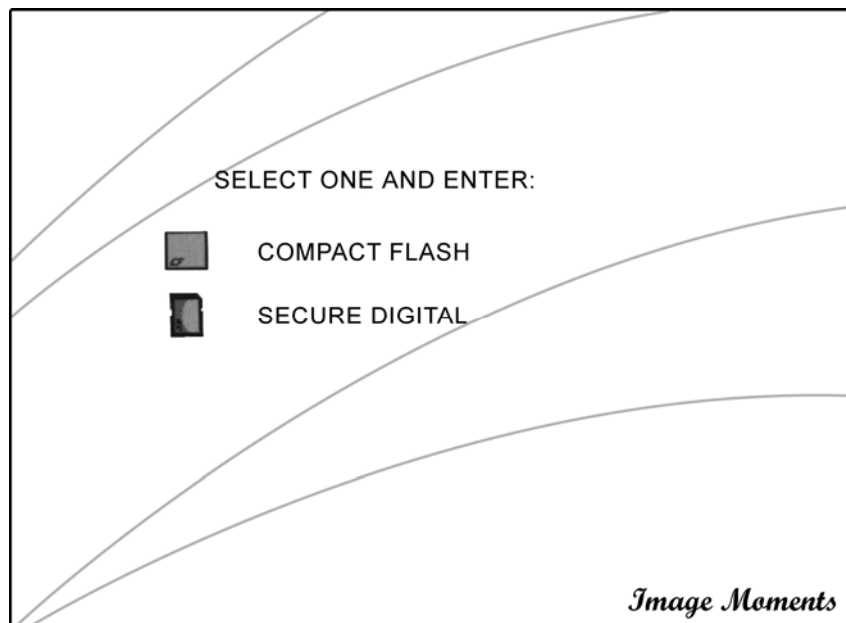

Use the Control Pad to choose the memory card you want to access and press PLAY/PAUSE to select the highlighted memory card.


## 2.6. Adjusting the Video Settings

 To access the Video Settings, press the Menu button on the top of Image Moments. This will display the Video Settings menu on the Image Moments screen.

Press the Select UP/DN buttons to navigate the highlight up and down. Press Menu again to select highlighted item.

Next use the Value +/- button to increase and decrease the value of the setting. The effect of your adjustments will be visible on the screen in real-time.

The Video Setting will disappear automatically after a few seconds of inactivity.

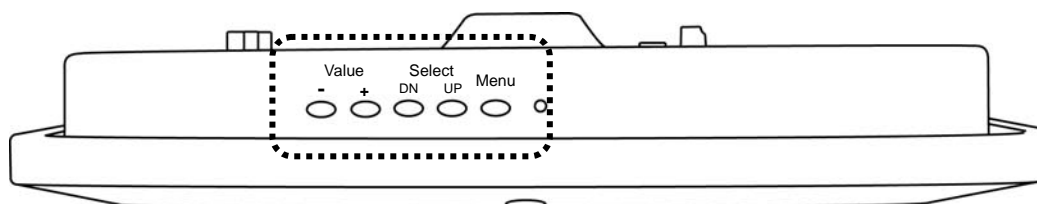

Video Setting		
Item	Description	Default
BRIGHTNESS	Adjust the brightness level of the display.	50
CONTRAST	Adjust the contrast of the display.	50
SHARPNESS	Adjust the sharpness of the display.	5
R GAIN	Adjust the level of red on the display.	50
G GAIN	Adjust the level of green on the display.	50
B GAIN	Adjust the level of blue on the display.	50
EXIT	Exit Video Setting screen.	

## 2.7. Setting the Volume

There are 2 volume settings on Image Moments.

The first setting is the *base volume setting* that determines the maximum volume range for Image Moments. You can adjust this setting by pressing the +/- buttons under Value on the top of Image Moments. The maximum *base volume setting* is 100.

The second setting is the *in-use volume setting* that sets the actual playing volume within the range determined by the *base volume setting*. You can adjust this setting by pressing the VOLUME buttons on the remote control. The maximum *in-use volume setting* is 16.


**Example:** If the remote control volume setting is at the maximum, 16, and you still would like to increase the volume level, press the + button under Value on the top of Image Moments.

### 3. Basic Operation Modes

The diagram below shows the Mode Select screen on Image Moments.


From this screen, you can use the Control Pad to select the desired mode.

 To navigate to the Mode Select screen, press STOP on the remote control until the Mode Select screen appears.

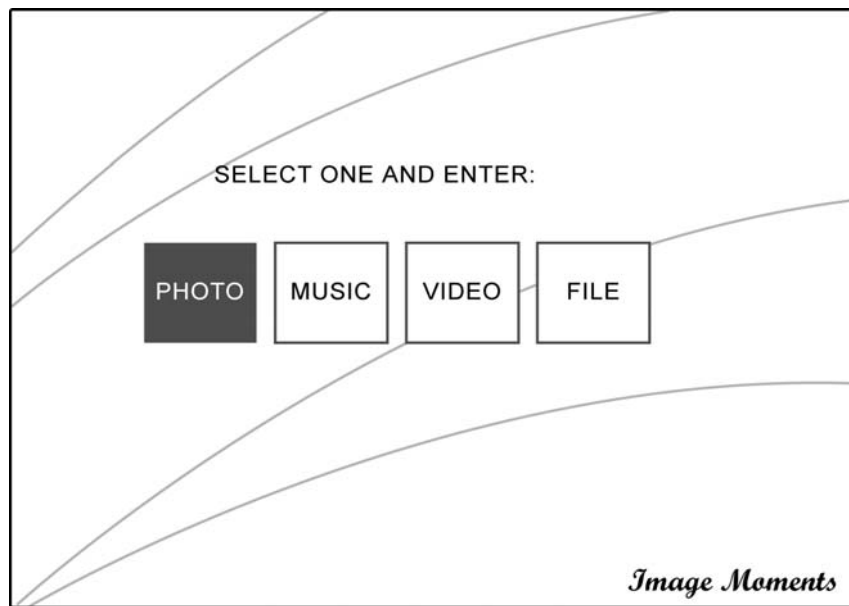

**Note:** You can use the PHOTO, MUSIC, VIDEO, and FILE mode select buttons on the remote control to access each mode directly.

### Image Moments – Screen Flow Diagram

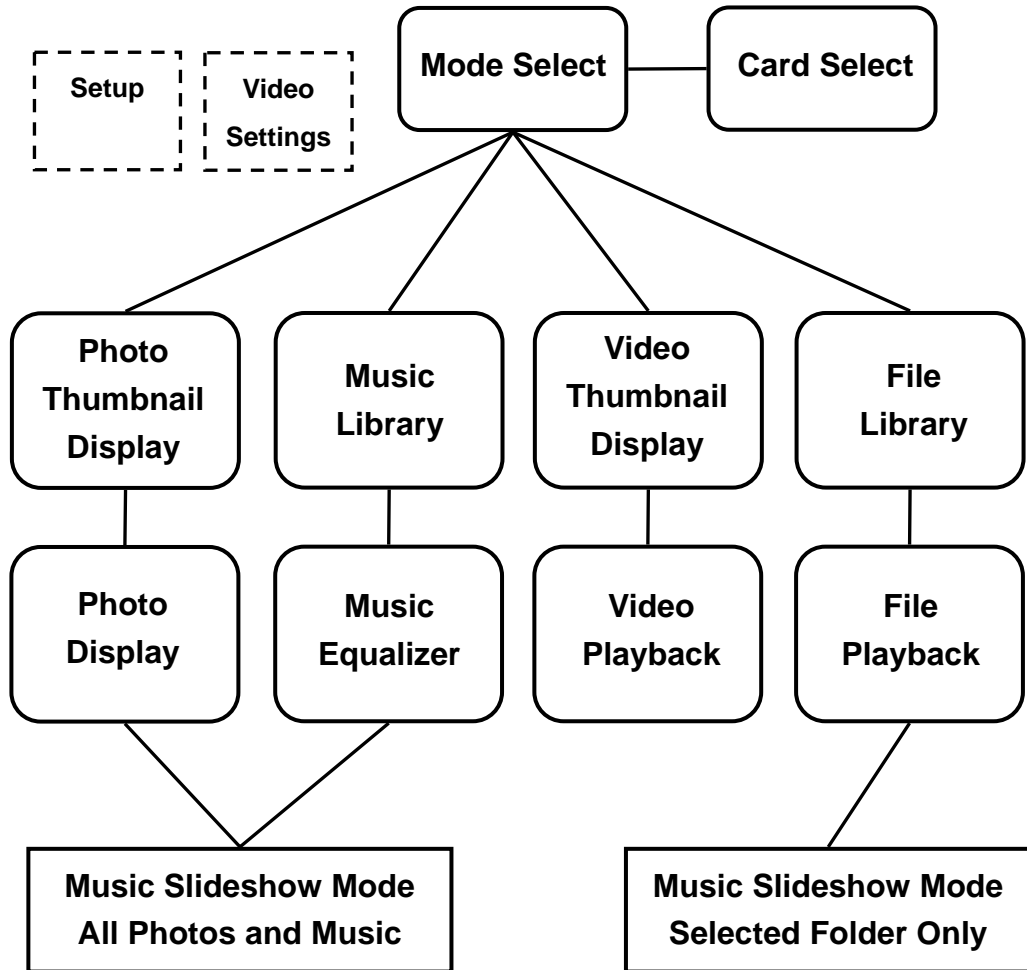 

### 3.1. Photo Mode


When Photo Mode is selected, Image Moments will scan through the selected memory card and show only the JPEG photo files. All of the JPEG photo files on the memory card will be listed in alphabetical order regardless of their folder location on the memory card.

In Photo Mode there are 2 display modes:

*Photo Thumbnail Display* and *Photo Display*

#### Photo Thumbnail Display

In Photo Thumbnail Display mode, you can view thumbnail images of your photos on a display that shows 9 thumbnails per page.

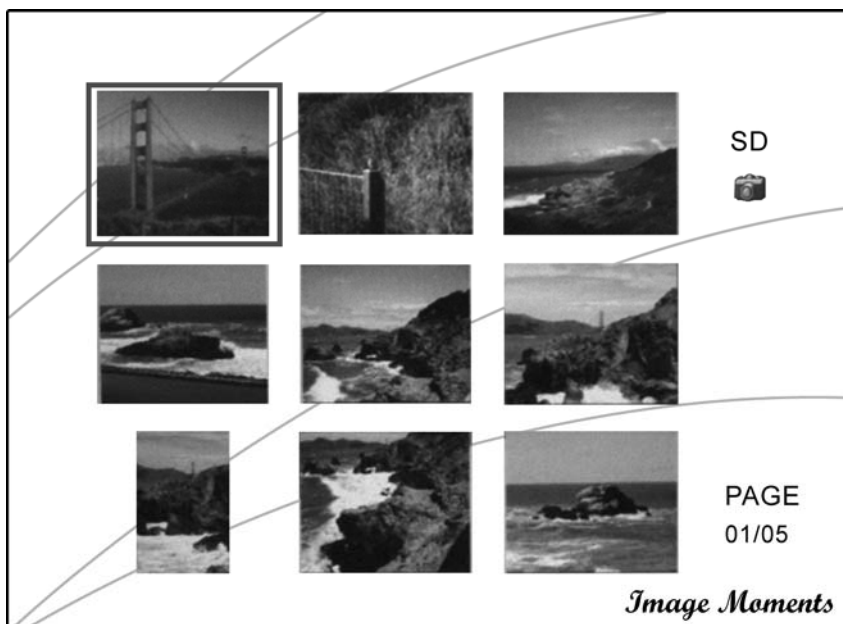 

- Use the Control Pad buttons to navigate the cursor over the thumbnails.
- Press PLAY/PAUSE on the highlighted thumbnail to view the photo.
- Press DISPLAY to show file information.
- Press PREV or NEXT to jump to the previous or next page of thumbnails.
- Press SLIDESHOW to start the Music Slideshow Mode.
- Press STOP to return to the Mode Select screen.

### Photo Display

In Photo Display mode, you will see your photos on the full screen.

You can navigate and select the photo to display by using the remote control.

- Use the Control Pad left and right buttons to navigate to the previous and next photo.
- Press PREV or NEXT to navigate to the previous or next photo.
- Press PLAY/PAUSE to start and pause the slideshow progression.
- Press DISPLAY to show file information.
- Press EFFECT to change the screen transition effect.
- Press SLIDE INTERVAL to change the timing for changing slides.
- Press ROTATE or ZOOM to rotate or zoom the photo.
- Press REPEAT to change the repeat setting of the slideshow.
- Press SLIDESHOW to start the Music Slideshow Mode.
- Press STOP to return to the Photo Thumbnail Display screen.

 
### 3.2. Music Mode

When Music Mode is selected, Image Moments will scan through the selected memory card and play only the MP3 music files. All of the MP3 Music files on the memory card will be listed in alphabetical order regardless of their folder location on the memory card.

In Music Mode there are 2 display modes:


*Music Library and Music Equalizer*

#### Music Library

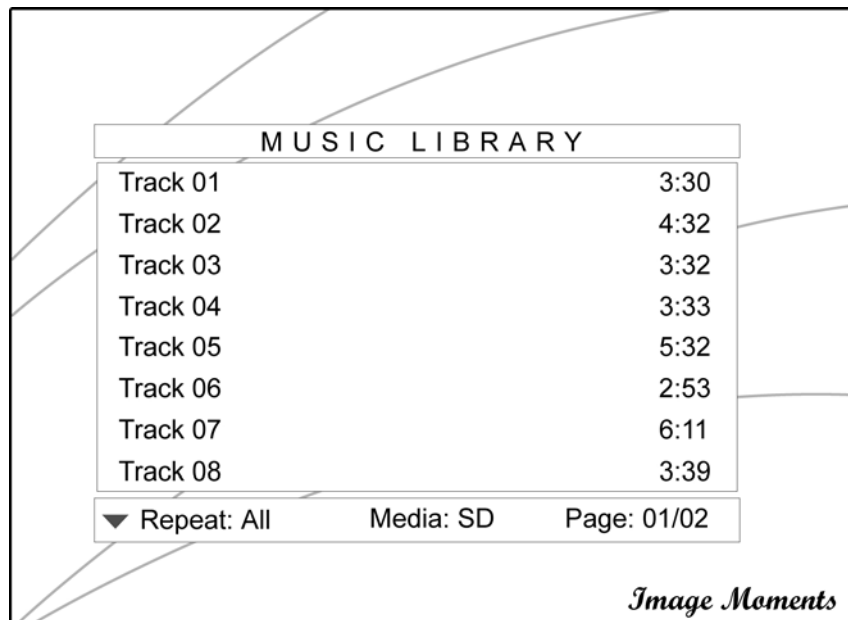

- Use the Control Pad buttons to change the song being played.
- Press REW and FF to scan through the song.
- Press PREV or NEXT to skip to the previous or next page.
- Press REPEAT to change the repeat setting.
- Press PLAY or DISPLAY to change the screen display to the Music Equalizer screen.
- Use the Audio Control buttons to adjust the playing volume and toggle the mute setting.
- Press SLIDESHOW to start the Music Slideshow Mode.
- Press STOP to stop playing the current song.  
Press STOP again to return to the Mode Select screen.

## Music Equalizer

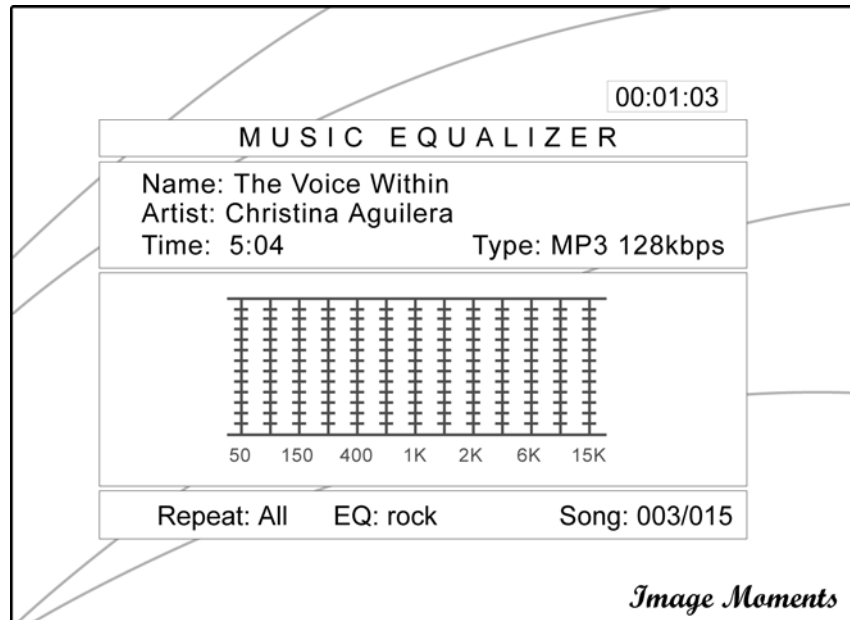 

- Press PLAY/PAUSE to play and pause the song.
- Press REW and FF to scan through the song.
- Press PREV and NEXT to skip to the previous or next song.
- Press DISPLAY to change the screen display to the Music Library screen.
- Press REPEAT\* to change the repeat setting.
- Press EFFECT to change the equalizer effect:  
Standard – Classic – Jazz – Rock – Pops – Ballad – Dance
- Use the Audio Control buttons to adjust the playing volume and toggle the mute setting.
- Press SLIDESHOW to start the Music Slideshow Mode.
- Press STOP to stop playing the song.  
Press STOP again to return to the Music Library screen.

\* If the repeat setting is set to One, PREV and NEXT will loop to that same song.

### 3.3. Video Mode

 
When Video Mode is selected, Image Moments will scan through the selected memory card and show only the video files. All of the video files on the memory card will be listed in alphabetical order regardless of their folder location on the memory card.

In Video Mode there are 2 display modes:

*Video Thumbnail Display and Video Playback*

#### Video Thumbnail Display

In Video Thumbnail Display mode, you can view thumbnails of all the videos on the selected memory card.

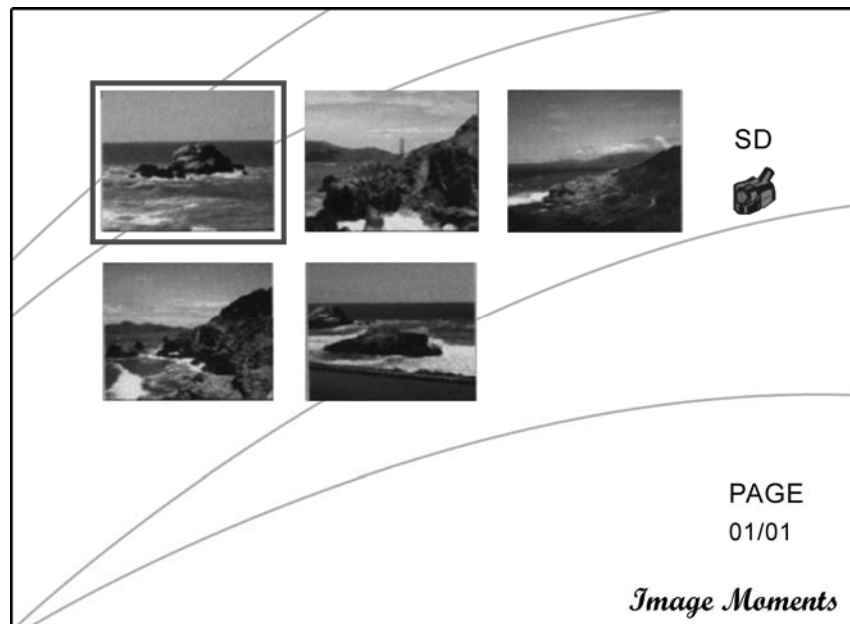

**Note:** The highlighted video will automatically play as a thumbnail.

- Use the Control Pad buttons to navigate the cursor over the thumbnails.
- Press PREV or NEXT to jump to the previous or next page of thumbnails.
- Press PLAY/PAUSE on the highlighted thumbnail to play the video.
- Press DISPLAY to show file information.
- Press STOP to return to the Mode Select screen.


### Video Playback

 - Press REW and FF to scan through the video.
- Press PREV or NEXT to skip to the previous or next video file.
- Press PLAY/PAUSE to start and pause the video.
- Use the Audio Control buttons to adjust the playing volume and toggle the mute setting.
- Press DISPLAY to show file information.
- Press STOP to return to the Video Thumbnail Display screen.

### 3.4. File Mode

When File Mode is selected, Image Moments will show the FILE LIBRARY screen where you can navigate through the directory on the selected memory card.

As you highlight each file, a preview of the highlighted file will show in the preview window at the lower-right hand portion of the screen.

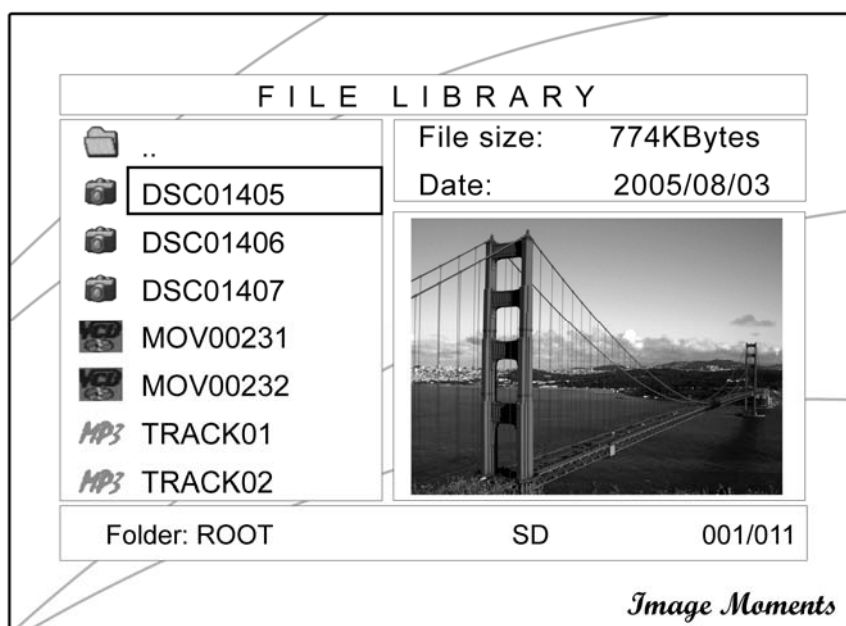

- Use the Control Pad to navigate through the folder directory.
- Press PLAY/PAUSE to select highlighted folder or play highlighted file.
- Return to the previous directory folder level by highlighting the topmost icon (the folder followed by “..”) and pressing PLAY/PAUSE.
- Press SLIDESHOW to start the Music Slideshow Mode.  
**Note:** When playing a Music Slideshow while in File Mode, only the photos and music files in the selected folder will be played.  
**Note:** If there are no photo files in the folder being accessed, nothing will play. Press FILE on the remote control to return to File Mode.
- Press STOP to return to the Mode Select screen.

### 3.5. Music Slideshow Mode

When Music Slideshow is selected, Image Moments will play the selected photos as a slideshow and also play available MP3 files in the background of the slideshow.

The Music Slideshow works differently depending on the mode you are in when you start the slideshow.

#### Photo Mode or Music Mode:

If the Music Slideshow is started while you are in Photo Mode or Music Mode, Image Moments will scan through all the files on the selected memory card and display all the photo files with the music files playing in the background.

#### File Mode:

If the Music Slideshow is started while you are in File Mode, Image Moments will only display and play the photos and music that are located in the selected folder.

**Note:** If there are no photo files in the folder you are currently accessing when you press the SLIDESHOW button, Image Moments will start the Music Slideshow but nothing will be displayed. Press the FILE on the remote control to return to File Mode.

## 4. How do I...

This section details step-by-step instructions on how to perform specific operations on Image Moments.

### 4.1. Play all the contents of my memory card.

1. Turn on Image Moments.
2. Insert your memory card.
  - All of the contents on your memory card will start playing automatically in alphabetical order.

### 4.2. Play a slideshow of all the photos only.

1. Turn on Image Moments.
2. Insert your memory card.
3. Press PHOTO on the remote control.
4. Press PLAY/PAUSE on the remote control.
  - If the slideshow does not advance automatically, this is because the Slideshow Setup – Slideshow Mode is set to Manual. Press PLAY/PAUSE again to start the automatic slideshow. (See *Section 5.4 Slideshow Setup* for details.)
  - All of the *photos* on your memory card will be played in a slideshow.

**Note:** Repeat the same process replacing PHOTO with VIDEO or MUSIC to access the Video Mode and Music Mode.

### 4.3. Play a music slideshow of all the photos on my memory card.

1. Turn on Image Moments.
2. Insert your memory card.
3. Press PHOTO on the remote control.
4. Press SLIDESHOW.
  - All the photos on your memory card will play as a slideshow and any MP3 songs on your memory card will play in the background of the slideshow.

**Note:** To add background music for the slideshow, copy your own MP3 files onto the memory card.

#### **4.4. Play only the files from a specific folder.**

1. Turn on Image Moments.
2. Insert your memory card.
3. Press FILE on the remote control.
4. Use the Control Pad to navigate to and select the desired folder.
5. You can choose to either (a) play the entire contents of the selected folder or (b) play the photos in the selected folder as a slideshow with any MP3 files in the background.

a. To play the entire contents of the selected folder:

Navigate to the photo you want to start the slideshow with and press PLAY/PAUSE.

- All the files in the selected folder will be played in alphabetical order.

**Note:** Press REPEAT on the remote control to toggle the repeat setting on and off.

b. To play the photos in the selected folder as a slideshow with any MP3 files in the background:

Press the SLIDESHOW button.

- The photos contained in the selected folder will play as a slideshow along with any MP3 files located in the selected folder.

**Note:** The MP3 file you want to play in the background must be located in the selected folder.

 
#### **4.5. Zoom and pan the displayed photo.**

1. While the photo is displayed on the screen, press ZOOM on the remote control. You can adjust the level of the zoom by pressing ZOOM multiple times.
  2. When the image is zoomed, use the Control Pad to pan around the zoomed image.
  3. Return to normal operation by pressing ZOOM until the image returns to its original display.
- You will be able to zoom in on specific parts of the displayed photo.

**Note:** If you zoom a photo when the slideshow is paused, the slideshow will continue to play after you turn off the zoom.

**4.6. Change the remote control battery.**


1. Slide out battery holder on remote control.
  2. Replace old battery with new **CR2025** (3 Volt) battery.
  3. Re-insert battery holder into remote control.
- See illustration below.

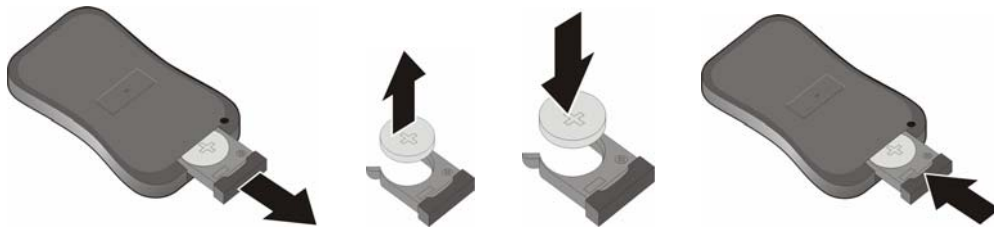

- The remote control is ready for use.

## 5. System Setup Options

 To access the Setup Menu, press **SETUP** on the remote control. The following screen shows the main page of the Setup Menu.

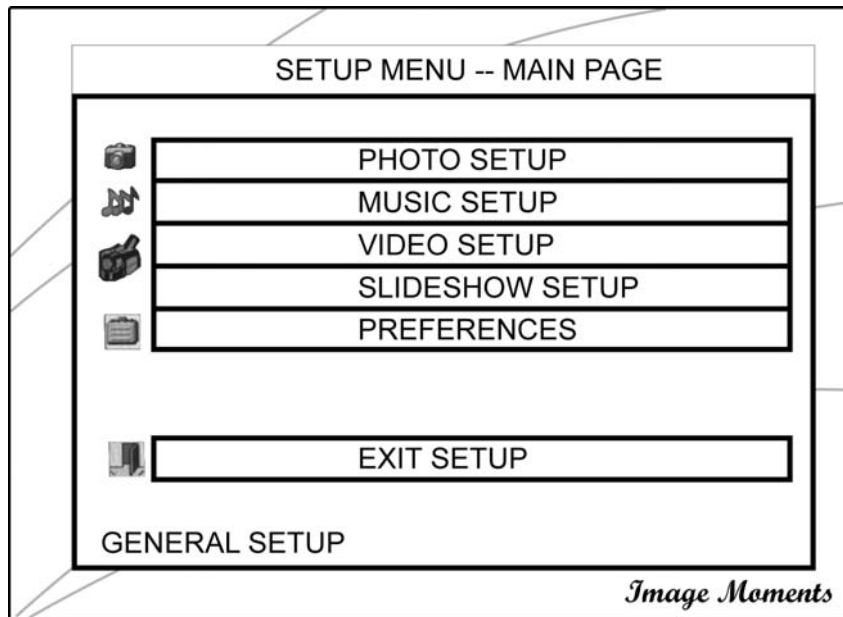

**Note:** The Preferences page of the Setup Menu can only be accessed while Image Moments is in the Mode Select screen. To navigate to the Mode Select screen, press **STOP** until you are at the Mode Select screen.

## 5.1. Photo Setup

<b>SETUP MENU -- PHOTO</b>		
SUBMENU	SELECTION	Description
THUMBNAIL DIGEST	ON	Use embedded thumbnails when available for faster loading.
	OFF	Resize thumbnails from original photo.
TRANSITION MODE	FAST	Transition screen effect occurs at faster speed.
	SLOW	Transition screen effect occurs at slower speed.
ORIENTATION	DEFAULT	Reserved for future use.
	IGNORE	Reserved for future use.
MAIN PAGE		Return to Setup Menu -- Main Page.

## 5.2. Music Setup

<b>SETUP MENU -- MUSIC</b>		
SUBMENU	SELECTION	Description
REPEAT MODE*	ONE	Repeat the current song.
	OFF	Stop playing after last song is finished.
	ALL	Repeat all songs in a continuous loop.
MAIN PAGE		Return to Setup Menu -- Main Page.

\* You can change the repeat mode setting on-the-fly with the REPEAT button on the remote control while in Music Mode.

### 5.3. Video Setup

SETUP MENU -- VIDEO		
SUBMENU	SELECTION	Description
REPEAT MODE*	SINGLE	Repeat the current video.
	ONE LOOP	Stop playing after last video is finished.
	CONTINUOUS	Repeat all videos in a continuous loop.
MAIN PAGE		Return to Setup Menu -- Main Page.

\* You can change the repeat mode setting on-the-fly with the REPEAT button on the remote control while in Video Mode.

## 5.4. Slideshow Setup

SETUP MENU -- SLIDESHOW		
SUBMENU	SELECTION	Description
SLIDESHOW MODE	MANUAL	Slideshow will wait for play command before starting.
	AUTO	Slideshow will start advancing automatically.
FOLDER REPEAT	ON	Slideshow will repeat in a continuous loop.
	OFF	Slideshow will stop at the end of the last photo.
INTERVAL TIME*	1, 3, 5, 10 SECONDS	Time interval before starting to load next the photo.
TRANSITION	SETTINGS 1~14	Select transition effect for slideshow. (See listing below.)
AUTO START**	ON	Slideshow will automatically start when turned on or card is inserted.
	OFF	Mode Select screen will be displayed when card is inserted.
MAIN PAGE		Return to Setup Menu -- Main Page.

\* Photos of larger file sizes will take more time to load. Selecting 1-Second does not mean that the next photo will be loaded in exactly 1 second. It means that the next photo will start the loading process after 1 second. Large files may take more than 1 second to display.

\*\* Image Moments will return to the default setting of 'Auto Start – ON' each time it is powered on. Every time you turn on Image Moments and insert your memory card, your files will begin playing automatically.

### Slideshow Transition Effects

- |                               |                                |
|-------------------------------|--------------------------------|
| 1) Full screen                | 8) Roll: Right to Left         |
| 2) Roll: Top to Bottom        | 9) Roll: Left/Right to Center  |
| 3) Roll: Bottom to Top        | 10) Roll: Center to Left/Right |
| 4) Roll: Top/Bottom to Center | 11) Roll: Implode              |
| 5) Roll: Center to Top/Bottom | 12) Blind: Left to Right       |
| 6) Blind: Top to Bottom       | 13) Cross Fade                 |
| 7) Roll: Left to Right        | 14) Slide Mode: Random         |

## 5.5. Preferences

<b>SETUP MENU -- PREFERENCES --</b>		
SUBMENU	SELECTION	Description
OSD LANG	~	Select language for On Screen Display of Setup Menu. (See chart below.)
OSD MESSAGE	ON	Reserved for future use.
	OFF	Reserved for future use.
SETUP VALUES	DEFAULT	Select to return all values to their default settings.
MAIN PAGE		Return to Setup Menu -- Main Page.

### Setup Menu Languages Supported

English	Swedish
Chinese	Danish
Chinese (Traditional)	Japanese
French	Portuguese
German	Spanish
Italian	

## **6. Tips and Techniques**

### **6.1. Organize your files to play in a specified order.**

Image Moments plays your files in alphabetical order. Photos and videos stored on your memory card taken directly from your digital camera will play in the order they were taken.

If you want to arrange your photos so that they playback in a specific sequence, you can use a computer or other file editing device to do so.

A simple way to do this is to edit your memory card files through your computer and rename the files so that they start with some kind of sequential naming pattern.

For instance, if you rename your files to start with 001, 002, 003, ... , Image Moments will play the files in numerical sequence starting with the lowest number first.

Alternatively, you can use alphabetical characters (I.e., A, B, C, ...) to organize your files.

 
## 6.2. Organize your photos by folders/events.

The File Library Mode of Image Moments lets you browse and access your files on the memory card by folder. You can use this feature to view and play slideshows of just the contents of *a specific folder*.

By organizing your collection of photos into separate folders, you will be able to select exactly which memories you want to relive easily.

A good way to organize your photos is to include a date code in the name of each folder. By doing this, you will be able to see your folders on Image Moments in date sequence. One recommendation is to use the first four digits of the file name to identify the year and month of the event. Then use the remainder to identify the event so you can recognize and find it more easily.

Example:

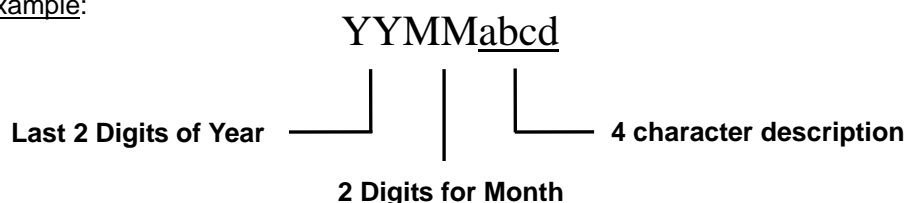

**Note:** Image Moments will only display the first 8 characters of each filename.

Now you can easily identify the different photo collections you have on the memory card, and select which photos you want to view.

## 6.3. Keep a dedicated memory card for Image Moments.

Image Moments is great for viewing your photos straight from your digital camera, but you may also consider keeping a memory card specifically to use with Image Moments.

With this dedicated card, you can build up your collection of photos and easily relive your memories anytime you want.

## 7. Frequently Asked Questions

### How many photos can I store on Image Moments?

- Image Moments does not have any internal memory. The number of photos that can be displayed on Image Moments depends on the size of the memory card used.

Use this chart below as a guide to help you estimate how many photos you can store on a memory card:

Resolution	Memory card capacity					
	32 MB	64 MB	128 MB	256 MB	512 MB	1 GB
<b>2 Megapixels</b>	35	71	142	284	568	1136
<b>3 Megapixels</b>	26	53	106	213	426	853
<b>4 Megapixels</b>	16	32	64	128	256	512
<b>5 Megapixels</b>	12	25	51	102	204	409
<b>6 Megapixels</b>	10	20	40	80	160	320

### Will I need a memory card adapter to access any of the supported memory card formats?

- You can directly insert into Image Moments memory cards of the following formats:

CompactFlash I/II, MicroDrive, SmartMedia, MultiMedia Card, SD Card, Memory Stick, MS PRO, MS Duo\*, and MS PRO Duo\*.

\* For MS Duo and MS PRO Duo, it is possible to insert these cards without the adapter provided by the memory card manufacturer, but it is advised that you use the adapter to prevent incorrect insertion.

- For miniSD and RS-MMC, you will need to use the adapter that came with your miniSD and RS-MMC card.

**I don't see a slot for the xD Picture Card format. How can I use xD Picture Cards with Image Moments?**

- You will need to use an adapter that will connect your xD card to one of the memory card slots on Image Moments.

For example, you can use an xD to CompactFlash adapter to connect your xD card to Image Moments through the CompactFlash memory card slot.

**How can I adjust the slideshow interval?**

- You can change the slideshow interval on-the-fly by pressing the SLIDE INTERVAL button on the remote control. You can choose among 1, 3, 5, and 10 seconds.

**The slide interval is set to 1-Second, but it seems to take longer than 1 second to change the picture. Why is it like this?**

- Photos of larger file sizes will take more time to load. Selecting 1-Second does not mean that the next photo will be loaded in exactly 1 second. It means that the next photo will start the loading process after 1 second. Large files may take longer than 1 second to display.

**After using Image Moments for a long period of time it seems to get hot. Should I be concerned?**

- As with any electrical device, it is normal for the device to heat up and become warm after long periods of use. If the device becomes excessively hot, turn it off and unplug the power to allow it to cool down. Also, make sure that Image Moments is placed in a well ventilated area.

**When I am in the thumbnail mode, after a few seconds, the slideshow starts automatically. How do I stop this?**

- Go into the Setup Menu by pressing SETUP on the remote control. Then, select Slideshow Setup. Under Auto Start, select OFF.

**When the slideshow starts, the photos don't advance automatically.  
How do I get them to advance automatically?**

- Press the PLAY/PAUSE button to start the automatic slideshow.
- You can also have the slideshow always start playing automatically. To do this, go into the Setup Menu by pressing SETUP on the remote control. Then, select Slideshow Setup. Under Slideshow Mode, select AUTO.

**How are the files and folders ordered on Image Moments?**

- Image Moments displays the files and folders alphabetically by their names.

## 8. Troubleshooting and Technical Support

### **The remote control doesn't seem to work properly.**

- Check to see that you have removed the protective film between the battery and the battery terminal on the remote control.
- The IR Sensor is located at the top center of the frame. Point the remote control to the sensor to improve the reception.
- The remote control has a range of about 15 feet depending on the remaining battery life in the remote control and environment factors. For best performance, make sure that you are operating the remote control within 15 feet and that there is a clear path between the remote control and Image Moments.
- The remote control may be low on battery. See *Section 4.6* for instructions on how to replace the battery.

### **The displayed images are distorted and not displaying correctly.**

- Turn off Image Moments. Remove and re-insert the memory card. Turn Image Moments back on. Check to see if the distorted images display correctly.
- View the contents of your memory card on a computer or other display device to verify that the original files on the memory card are not corrupted.

### **Image Moments will not recognize my memory card.**

- Check to see that your memory card is inserted in the correct slot and with the correct orientation.

### **The display is not bright enough.**

- Use the Video Settings to adjust the display brightness, contrast, and sharpness. See *Section 2.6* for detailed instructions.

### Technical Support Contact

If you are still having troubles using your Image Moments, please contact Digital Foci, Inc. technical support at [support@digitalfoci.com](mailto:support@digitalfoci.com).

## 9. Appendix – Image Moments Technical Specifications

Model No.	IMT-80
LCD screen	8" color TFT LCD screen
Screen resolution	640 x 480 pixels (VGA)
Picture aspect ratio	4:3
Brightness	250 cd/m <sup>2</sup>
Contrast ratio	250:1
Viewing angle	130° H / 110° V
Memory card supported	CompactFlash I & II, MicroDrive SmartMedia, xD* SD Card, miniSD*, MultiMedia Card, RS-MMC* Memory Stick, MS PRO, MS Duo*, MS PRO Duo* (* adapter required)
Image format support	JPEG
Video format support	MPEG-1, MPEG-2, MJPEG / (.mpg, .dat, .avi)
Music format support	MP3
Power	AC 100-240V, DC 12V/3A power adapter
Dimensions	9.8" (L) x 8.0" (W) x 1.8" (H)
Weight	2.9 lbs

## 10. Regulatory Compliance

### 10.1. FCC Part 15 Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operations.

The device has been tested and verified to be within the energy emission limits for Class B digital devices as defined in Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential situation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Installed correctly, it probably will not interfere with your radio or TV. However, we do not guarantee the absence of interference.

If you modify the device in any way, without approval from Digital Foci, Inc., your device may violate FCC regulations. Violation of FCC regulations may cause the FCC to void your rights to use the modified device.

If you suspect this device is causing interference, power off and on the device while your radio or TV is showing interference. If the interference disappears when you turn the device off and reappears when you turn the device on, something in the device is causing interference.

To reduce interference, try these suggestions:

- Change the direction of the radio or TV antenna.
- Increase the separation between the device and radio or TV.
- Connect the device into an outlet on a circuit different from that to which the radio or TV is connected.

If these suggestions don't help, consult your computer dealer or an experienced radio/TV technician for more suggestions.

## **10.2. CANADIAN DOC STATEMENT**

This digital apparatus does not exceed the Class B limits for radio noise for digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

## **10.3. CE Standards**

Testing for compliance to CE standards was performed by an independent laboratory. The unit under test was found compliant to CE Class B specifications.

## **10.4. UL/CSA**

This product is recognized per Underwriter Laboratories and Canadian Underwriter Laboratories 1950.



DIGITAL  
FOCI

3111 Via Mondo, Rancho Dominguez, California, 90221 USA

Copyright 2005 Digital Foci, Inc. All rights reserved.