

# Image Moments

Digital Picture Display

Quick Start Guide



DIGITAL  
FOCI

[www.digitalfoci.com](http://www.digitalfoci.com)

3111 Via Mondo  
Rancho Domingues, CA 90221  
USA

DIGITAL  
FOCI

Thank you for choosing Digital Foci.

Please use this Quick Start Guide to get started with your Image Moments.

For more detailed explanations about how to use Image Moments, refer to the included User's Guide.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- ♦ Easy-to-use products to help you manage and enjoy your digital content
- ♦ Attractive products to accentuate your unique style
- ♦ Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

For more information about Image Moments and other products from Digital Foci, please visit our website at:

[www.digitalfoci.com](http://www.digitalfoci.com)

Congratulations on purchasing your Image Moments - Digital Picture Display.

Image Moments is:

- ♦ A **digital picture display** that gives you a quick and easy way to view your pictures directly from your memory card.
- ♦ A **source of memories and happiness** that helps you relive your treasured memories everyday.
- ♦ A **stylish and classy decorative piece** that looks great in any living room or office setting.
- ♦ A **mini entertainment center** that can playback your photos, videos, and music.

#### Supported Memory Card Formats:

CompactFlash I/II, MicroDrive  
Smart Media, xD Picture Card\*  
Secure Digital, miniSD\*, MultiMedia Card, RS-MMC\*  
Memory Stick, MS PRO, MS Duo\*, MS PRO Duo\*  
(\* adapter required)

 
#### Supported File Formats:

- ♦ Image format: JPEG
- ♦ Video formats: MPEG-1, MPEG-2, MJPEG / (.mpg, .dat, .avi)
- ♦ Audio format: MP3


#### Package Contents:

- ♦ Image Moments
- ♦ Remote control
- ♦ Video/Audio cables
- ♦ Detachable leg
- ♦ AC adapter
- ♦ Warranty Card
- ♦ User's Guide
- ♦ Quick Start Guide


## Device Layout

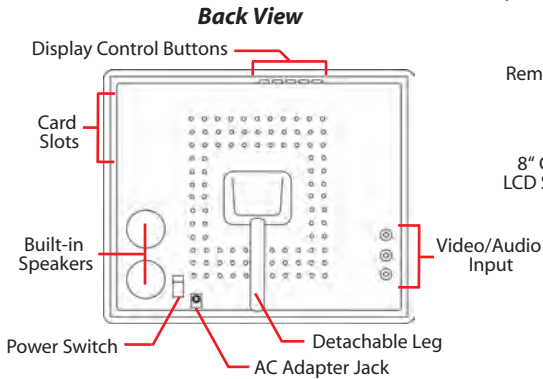

## Side View

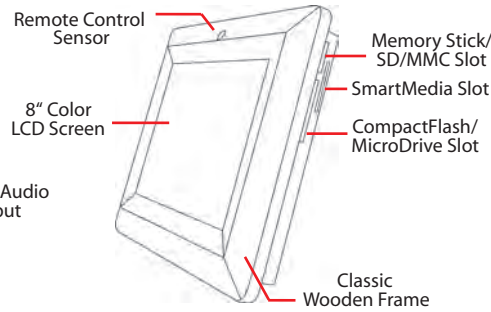 

## Remote Control Layout

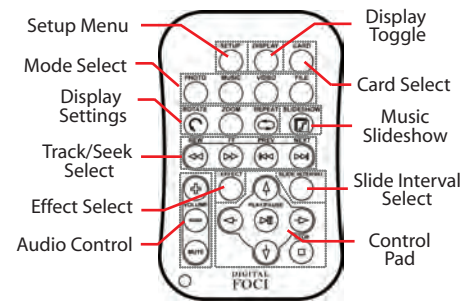 

## Getting Image Moments Ready for Use

### Attaching the Leg

Locate the detachable leg in the packaging. Screw it into the detachable leg port on the back of Image Moments just under the middle part that slightly sticks out.

### Powering Image Moments

Plug the AC adapter to the AC Adapter Jack on the back of Image Moments. Next, connect the power plug of the adapter to a wall socket.

Now you can power on Image Moments by flipping the Power Switch to the up position.

### Preparing the Remote Control

Pull on the protective tab between the battery and battery terminal to activate the battery.

### Inserting Memory Cards

Insert your memory card in the designated memory card slot with the label side facing the front.

Refer to the *Side View* illustration above for the correct card slot designations.

 
### Selecting from Multiple Memory Cards

When more than one memory card is inserted in Image Moments, you can choose which card to access by navigating to the Mode Select screen (top of menu) and pressing the **CARD** button on the remote control.


### Adjusting the Video Settings

On Image Moments, you can adjust the brightness, contrast, sharpness, and RGB color levels of the screen.

1. Press the **Menu** button on the top of Image Moments to display the Video Settings screen.
2. Press the **Select UP/DN** buttons to navigate the highlight up and down among the Video Setting options. Press **Menu** again to select the highlighted item.
3. Use the **Value +/-** buttons to adjust the value of the selected setting. The effect of your adjustments will be visible on the screen in real-time.

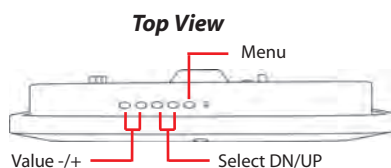

## Screen Flow Diagram

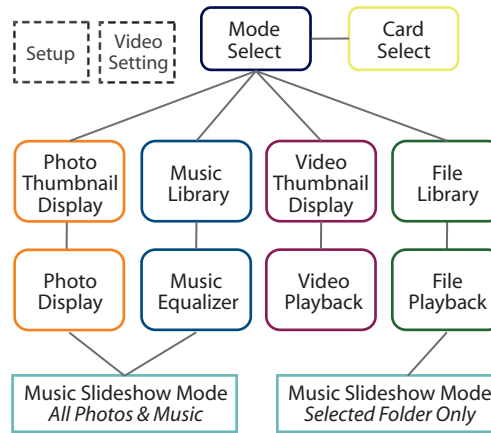 

## Selecting Playing Mode

You can use the **PHOTO**, **MUSIC**, **VIDEO**, and **FILE** mode select buttons on the remote control to access each mode directly.

### Photo Mode, Music Mode, Video Mode

When **Photo**, **Music**, or **Video Mode** is selected, Image Moments will scan through the selected memory card and show only the photo files, MP3 music files, or video files.

### File Mode

When **File Mode** is selected, Image Moments will show the **FILE LIBRARY** screen where you can navigate through the directory on the selected memory card.

As you highlight each file, a preview of the highlighted file will be displayed.

## Playing ALL the Contents of Your Memory Card Automatically:

1. Turn on Image Moments.
  2. Insert your memory card.
- ❖ All of the contents on your card will start playing automatically in alphabetical order.

## Displaying Photos:

### Photo Thumbnail Display view:

Press **PHOTO** on the remote control to view thumbnail images of your photos.

- ♦ Use the Control Pad buttons to navigate the cursor over the thumbnails.
- ♦ Press **PREV** or **NEXT** to jump to the previous or next page of thumbnails.
- ♦ Press **PLAY/PAUSE** on the highlighted thumbnail to display the photo full screen.

### Photo Display view:

This view displays your photos full screen.

- ♦ Press **PREV** or **NEXT** to navigate to the previous and next photo.
- ♦ Press **ROTATE** or **ZOOM** to rotate or zoom the photo.

## Playing a Photo Slideshow of All the Photos on Your Memory Card:

1. Press **PHOTO** on the remote control.
2. Press **PLAY/PAUSE** to start the slideshow.

**Note:** You might need to press **PLAY/PAUSE** again to start the automatic slideshow if Slideshow Mode is set to Manual. (See Section 5.4 Slideshow Setup in the User's Guide for more details.)

## Playing a Slideshow of All the Photos on Your Memory Card with Background Music:

1. Press **PHOTO** on the remote control.
  2. Press **SLIDESHOW**.
- ❖ All of the photos on your memory card will play as a slideshow and any MP3 songs on the memory card will play in the background.

**Note:** To add background music for the slideshow, copy your own MP3 files onto the memory card.

## Playing a Photo Slideshow with Music from a Specific Folder Only:

1. Press **FILE** on the remote control.
  2. Use the Control Pad to navigate to and select the desired folder.
  3. Press **SLIDESHOW**.
- ❖ The photos contained in this selected folder will play as a slideshow along with any MP3 files located in the selected folder.

**Note:** The MP3 file you want to play in the background must be located in the selected folder. If there is no MP3 file present, no music will play.

## Changing Slideshow Settings:

You can change the slideshow settings on-the-fly while the slideshow is playing.

- ♦ Press **SLIDE INTERVAL** to change the timing for changing slides among 1, 3, 5, and 10 seconds.
- ♦ Press **EFFECT** to change the screen transition effect.
- ♦ Press **REPEAT** to change the repeat setting.

Read the User's Guide to learn more about operating your Image Moments, and tips on how to organize your photos for Image Moments for optimal use.