

Memory Card Gateway

USB 2.0 Multi-format Card Reader

User's Guide



DIGITAL
FOCI

www.digitalfoci.com

3111 Via Mondo
Rancho Dominguez, CA 90221
USA

DIGITAL
FOCI

Thank you for choosing Digital Foci.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- ◆ Easy-to-use products to help you manage and enjoy your digital content
- ◆ Attractive products to accentuate your unique style
- ◆ Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

Congratulations on purchasing your Memory Card Gateway - USB 2.0 Multi-format Card Reader.

Memory Card Gateway is a central access point for the memory cards used with your digital camera, MP3 player, cell phone, PDA, Smartphone, GPS, PSP, digital video camera, and computer.

Use Memory Card Gateway to access and organize your digital media on virtually all memory card formats. You can:

- ◆ Access pictures on your digital camera memory card and back them up on your computer
- ◆ Transfer your MP3 files from your computer to the memory card in your digital audio player
- ◆ Transfer and back up data from your cell phone, PDA, and Smartphone to your computer
- ◆ Copy files directly from memory card to memory card

For more information about Memory Card Gateway and other products from Digital Foci, please visit us at:

www.digitalfoci.com

Package Contents:

Memory Card Gateway ♦ USB cable ♦ User's Guide

Computer System Requirements:

- ◆ Computer running any of these operating systems:
 - Windows® Vista, XP, 2000 (SP3 & SP4), ME, 98SE**
 - Macintosh™ OS 10.x & later, 9.x**
 - Linux® OS kernel versions 2.4.x or higher
- ◆ One available USB port

** Driver installation required for Win 98SE and Mac 9.x

Technical Specifications:

Model no.

MCG-150

Memory card support

CompactFlash, MicroDrive, Secure Digital, SDHC, MMC, miniSD, RS-MMC, MicroSD, TransFlash, MMCmicro, Memory Stick, MS PRO, MS Duo, MS PRO Duo, xD (including M-Type & H-Type), SmartMedia, (also supports MS M2 with adapter)

Computer interface

USB 2.0 (compatible with USB 1.1)

Power

Runs on USB power from computer

Indicators

1 power indicator & 1 card access indicator

OS compatibility

Windows Vista, XP, 2000 (SP3 & SP4), ME
Macintosh OS 10.x & later
Linux OS 2.4.X & later
(Windows 98SE & Macintosh 9.0x with driver installation; driver downloadable at www.digitalfoci.com/support)

Dimensions

3.0" (L) x 2.5" (W) x 0.7" (H)

Weight

2 oz.

Technical Support

If you have any question about using your Memory Card Gateway, please contact Digital Foci technical support by email at: support@digitalfoci.com or call 1-888-NOW-FOCI.

FAQs

Check the Digital Foci website (www.digitalfoci.com) for Frequently Asked Questions and additional tips.

Connecting your Memory Card Gateway

Connect Memory Card Gateway to your computer with the included USB cable.

Once connected, the Power LED will turn red to indicate that the device is receiving power and ready to use. Your computer will automatically* install 5 **Removable Disks**, for each the 5 memory card slots.

For Windows: 5 *Removable Disks* will be shown under My Computer

For Mac: 5 *Removable Disks* will be created on the Desktop

The Removable Disks will be listed in the following sequence:

(Actual drive letters may vary)

(g:) SD Card / SDHC / MMC / RS-MMC

(h:) CompactFlash / MicroDrive


(i:) SmartMedia / xD-Picture Card

(j:) Memory Stick / MS PRO / MS Duo / MS PRO Duo

(k:) microSD / microMMC / TransFlash

* **NOTE:** Driver installation required for Windows 98SE and Mac 9.x.

Drivers can be downloaded at www.digitalfoci.com/support.

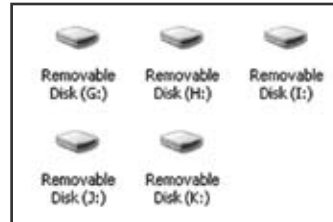

LED Indicators

Memory Card Gateway has 2 LED indicators:


Power LED:

- When the device is plugged in and receiving power, the Power LED will turn red.

Card Access LED:

- When a memory card is inserted, the Card Access LED will turn green.

- When data is being accessed on or written to a memory card, the Card Access LED will flash until the operation is complete.

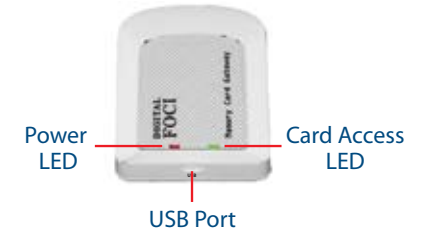


Warning: DO NOT remove memory cards or unplug the device while the Card Access LED is flashing. Removing memory cards or unplugging the device during data transmission may crash your computer and cause you to lose valuable data.

Inserting Memory Cards

Memory Card Gateway has 5 card slots that allow you to simultaneously access and transfer data between the 5 card slots* and your computer.

***EXCEPTION:** SD/MMC and microSD/MMCmicro cannot be used simultaneously.

Each card slot is designed to support a specific series of memory card formats.

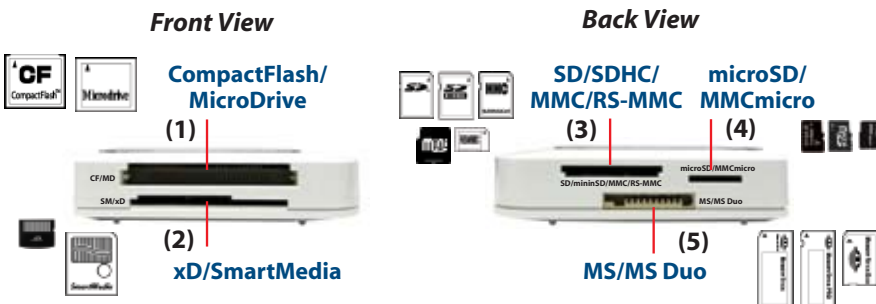

Each memory card should be inserted as described below:

(1) **CF/MD:** Insert the card label side facing up.

(2) **xD/SmartMedia:** Insert the card with gold connector side facing up.

*For xD, position the card against the left side of the slot.

(3) **SD/miniSD/MMC/RS-MMC:** Insert the card with label side facing up.

*For miniSD, position the card in the middle of the slot.

(4) **MicroSD/MMCmicro:** Insert the card with label side facing up.

*For MicroSD/TransFlash, position against the right side of the slot.

*For MMCmicro, position the card against the left side of the slot.

(5) **MS/MS Duo:** Insert the card with label side facing up.

*Also supports MS M2 (MS Micro) card with adapter.

Accessing Files with Memory Card Gateway

After inserting a memory card into its proper slot, the device will allow you to access the contents of that memory card just as you would access the contents of the hard disk drive on your computer. You can use it in the same way that you use the hard disk drive to move, copy, edit, view, and delete files.

Safely Removing Memory Cards

Before removing memory cards from the device, make sure that there is no data being written to or read from the memory card. Follow these instructions to safely remove your memory cards:

For Windows: From Windows Explorer, right click on the icon of the card to be removed and select 'Eject'.

For Mac: On the Desktop, drag and drop the corresponding disk icon into the Trash Can.

Icon Utility (Windows Only)

The Icon Utility program replaces the generic removable disk icons and labels on your computer with descriptive icons and labels for each of the 5 card slots as illustrated here.

When a memory card is inserted successfully, the corresponding memory icon will be shown in color. The other memory card slots will have picture icons displayed in black and white.

You can download the Icon Utility driver at our website at: www.digitalfoci.com/support.

